



1/32 Do 335 A-0  
Instruction  
Manual  
p11.

3-1. H  
Ejection Seat

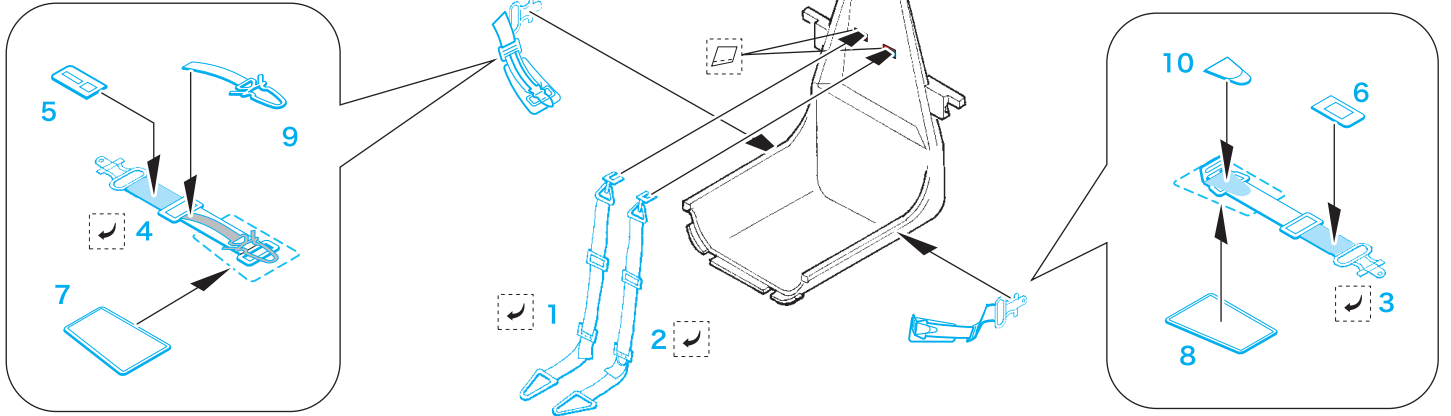

1/32 Do 335 A-12  
Instruction  
Manual  
p3.


3-8. A  
Back Seat

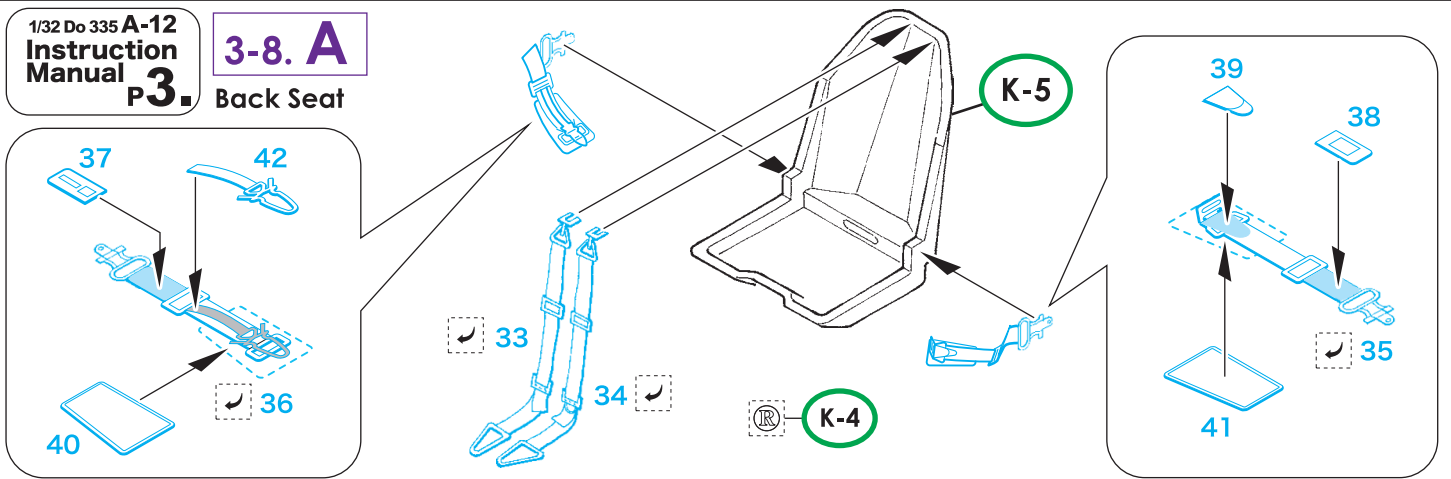

43 K-9

1/32 Do 335 A-12  
Instruction  
Manual  
p4.

1/32 Do 335 A-0  
Instruction  
Manual  
p 15. 3-1. P

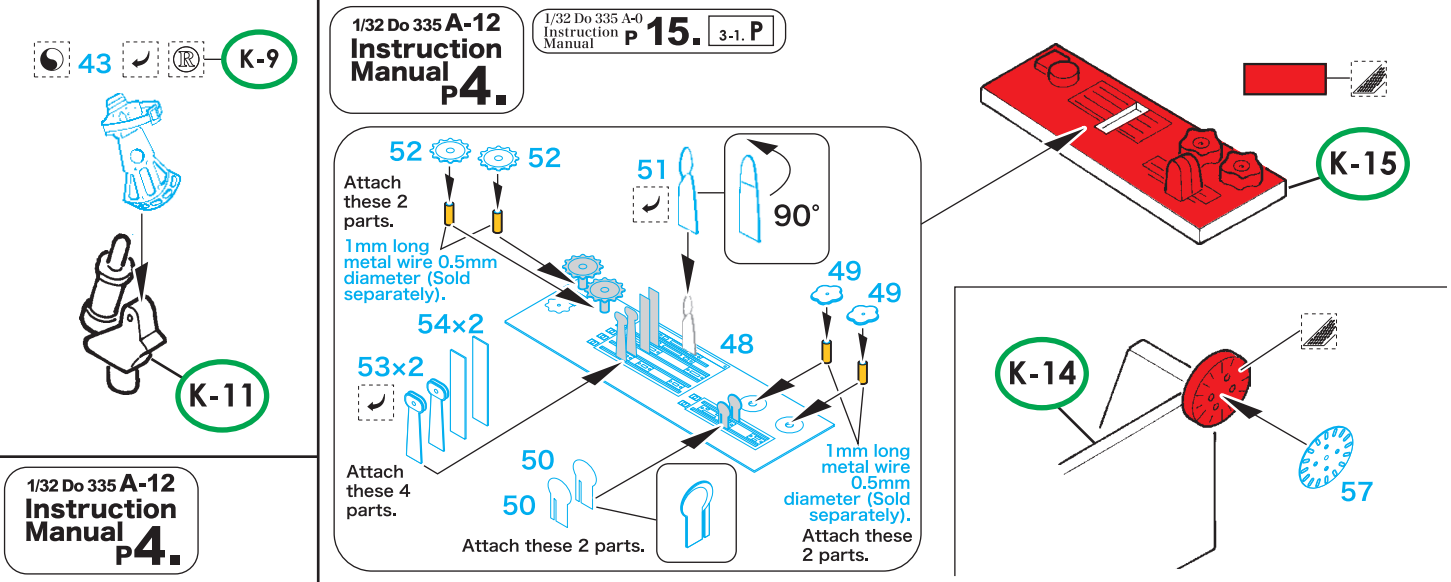

1/32 Do 335 A-12  
Instruction  
Manual  
p4.

3-8. B

Fuselage Upper  
External Panel &  
Back Seat  
Instrument Panel

