


1/48 Ta 152 H-1
Instruction Manual
P.8

012


胴体外版
Fuselage Panels

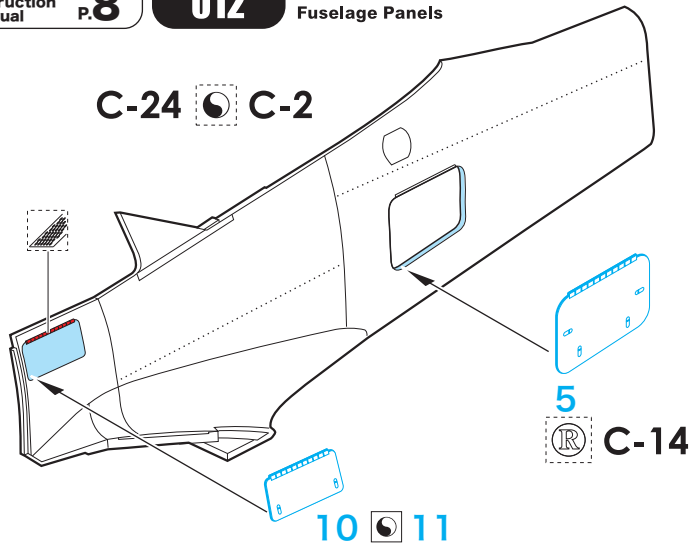

1/48 Ta 152 H-1
Instruction Manual
P.13

024


主脚カバー(右側)
Main Landing Gear Cover
(Right)

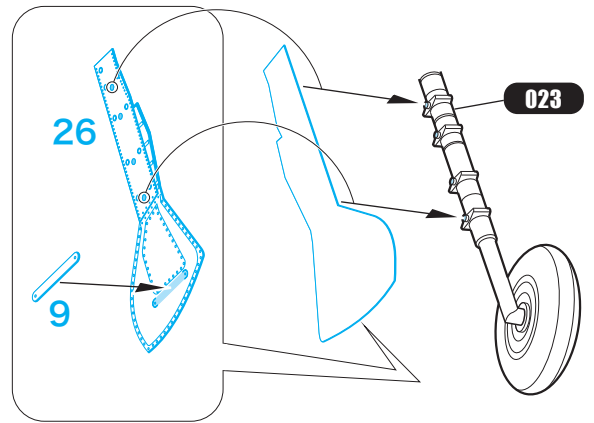

1/48 Ta 152 H-1
Instruction Manual
P.14

025


主脚カバー(左側)
Main Landing Gear Cover
(Left)

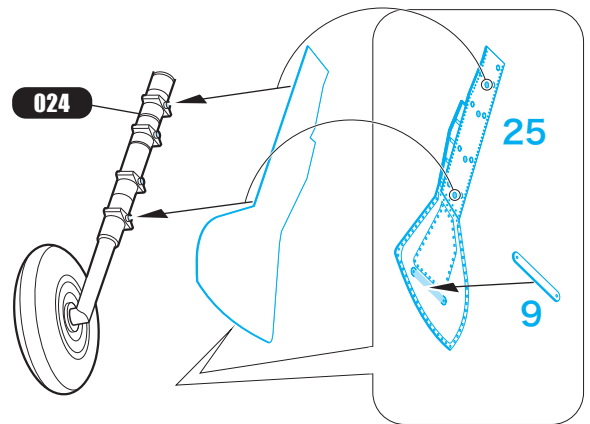

1/48 Ta 152 H-1
Instruction Manual
P.16

029


キャノピー
Canopy

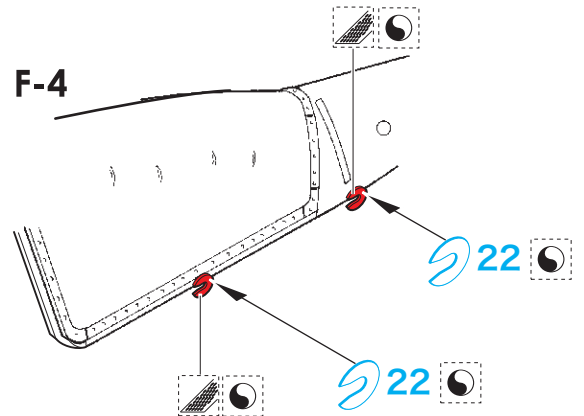

1/48 Ta 152 H-1
Instruction Manual
P.10

015


主翼下面
Lower Surface of Main Wings

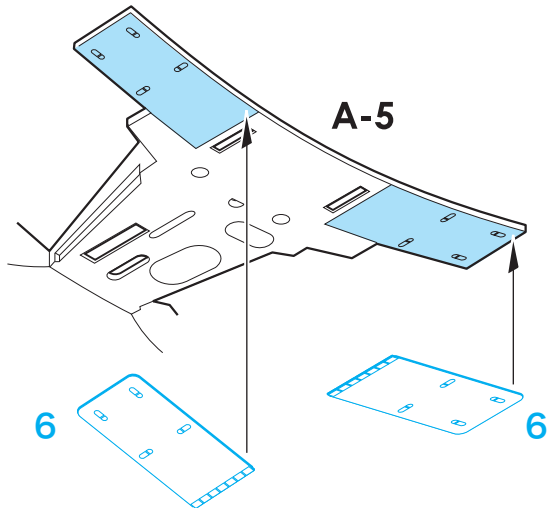

1/48 Ta 152 H-1
Instruction Manual
P.12

020


ラジエーター シュラウド
Radiator Shroud

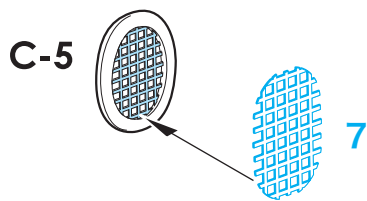

1/48 Ta 152 H-1
Instruction Manual
P.12

022

水平尾翼と尾輪
Horizontal Stabilizer and Tail Wheel

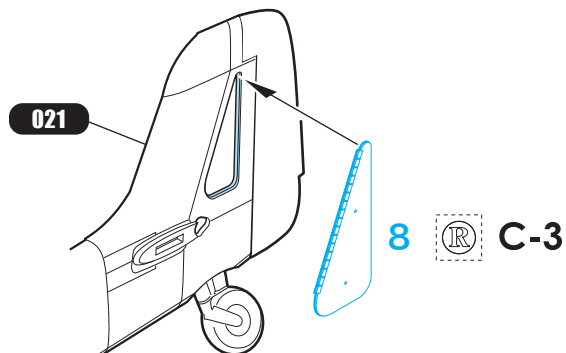

1/48 Ta 152 H-1
Instruction Manual
P.17

031

最終機装
Final Outfitting

