

148 F-4
Instruction Manual P.5



004

Console

H-11

For **J** Type Assembly

For **S** Type Assembly

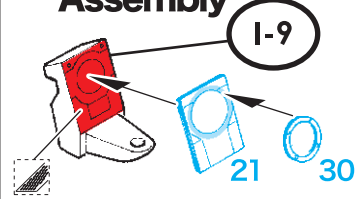
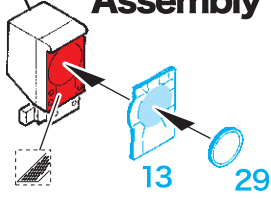


For **J** Type Assembly

For **S** Type Assembly

H-13

H-13

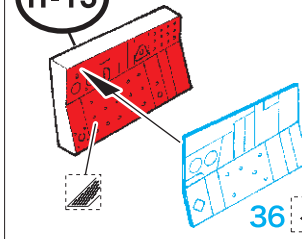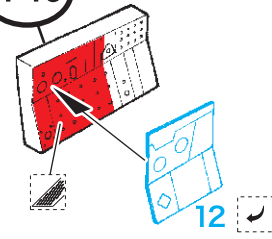

148 F-4
Instruction Manual P.6

005



Back Seat Instrument Panel

For **J** Type Assembly

For **S** Type Assembly

H-17

I-10

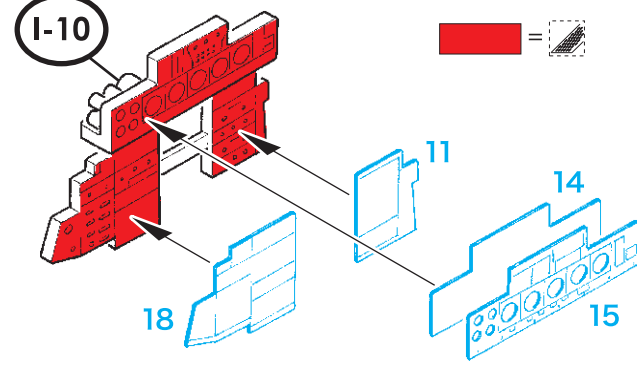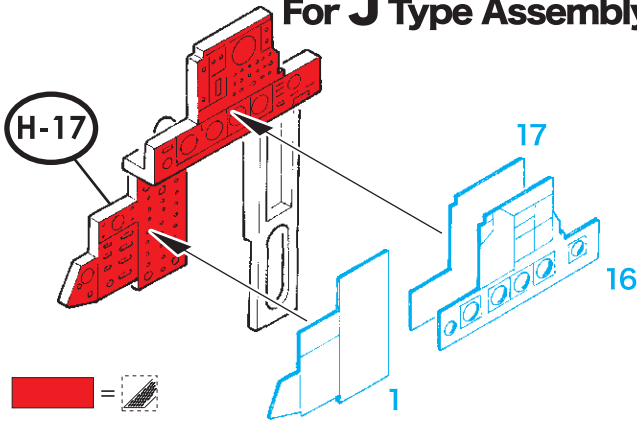

148 F-4
Instruction Manual P.6

006



Fuselage Outer Panel (Right)

Common to **J/S** Types

A-1

Remove the plastic according to the shapes of the turned metal parts.

A-1

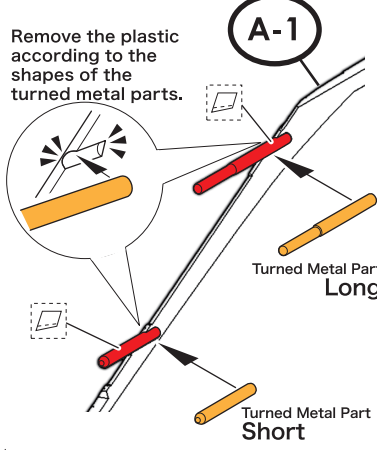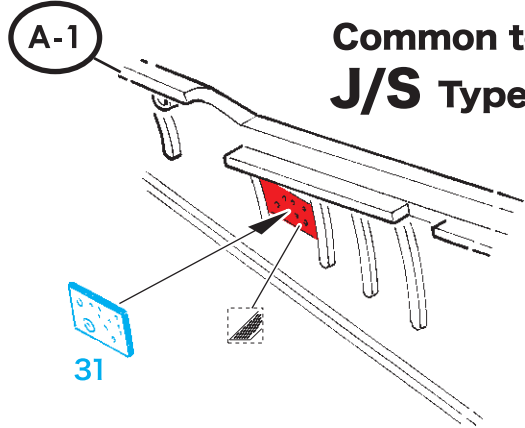


007

Fuselage Outer Panel (Left)

Verify that the parts fit perfectly and attach.

A-1

A-15

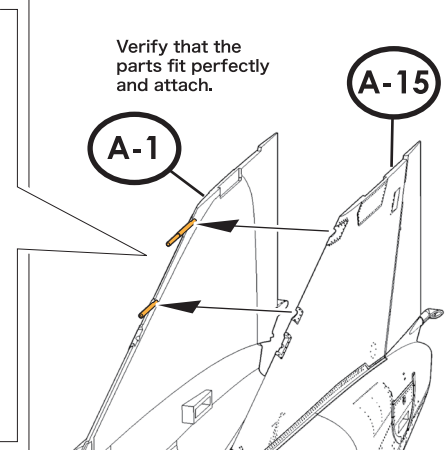

148 F-4
Instruction Manual P.24

039

Canopy

Common to **J/S** Types

G-3

G-4

G-5

