


003


シートレール Seatrail

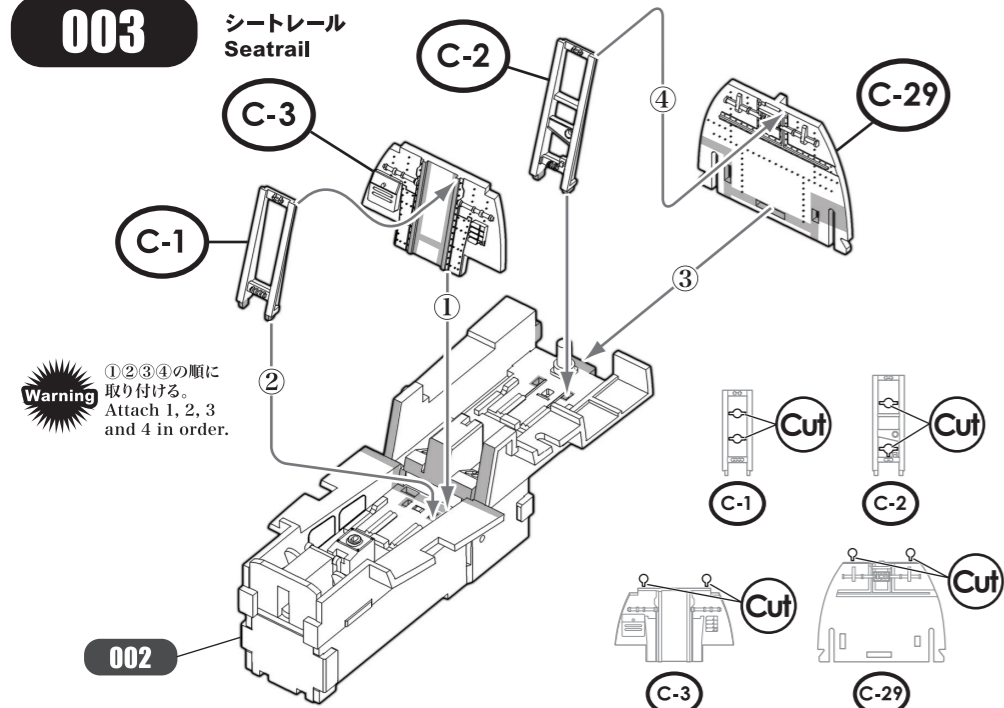

実機におけるパーツ名
 Name of the parts of the real aircraft.


- C-1 ガイドレール / Guide Rail
- C-2 ガイドレール / Guide Rail
- C-3 隔壁 / Bulkhead
- C-29 隔壁 / Bulkhead

各パーツ接着位置
 Parts configuration after assembly.

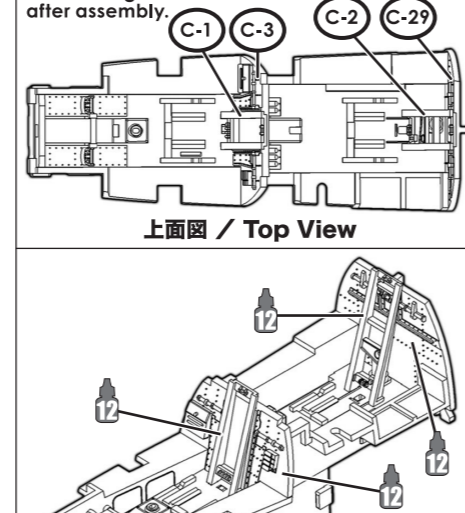

004


コンソール Console

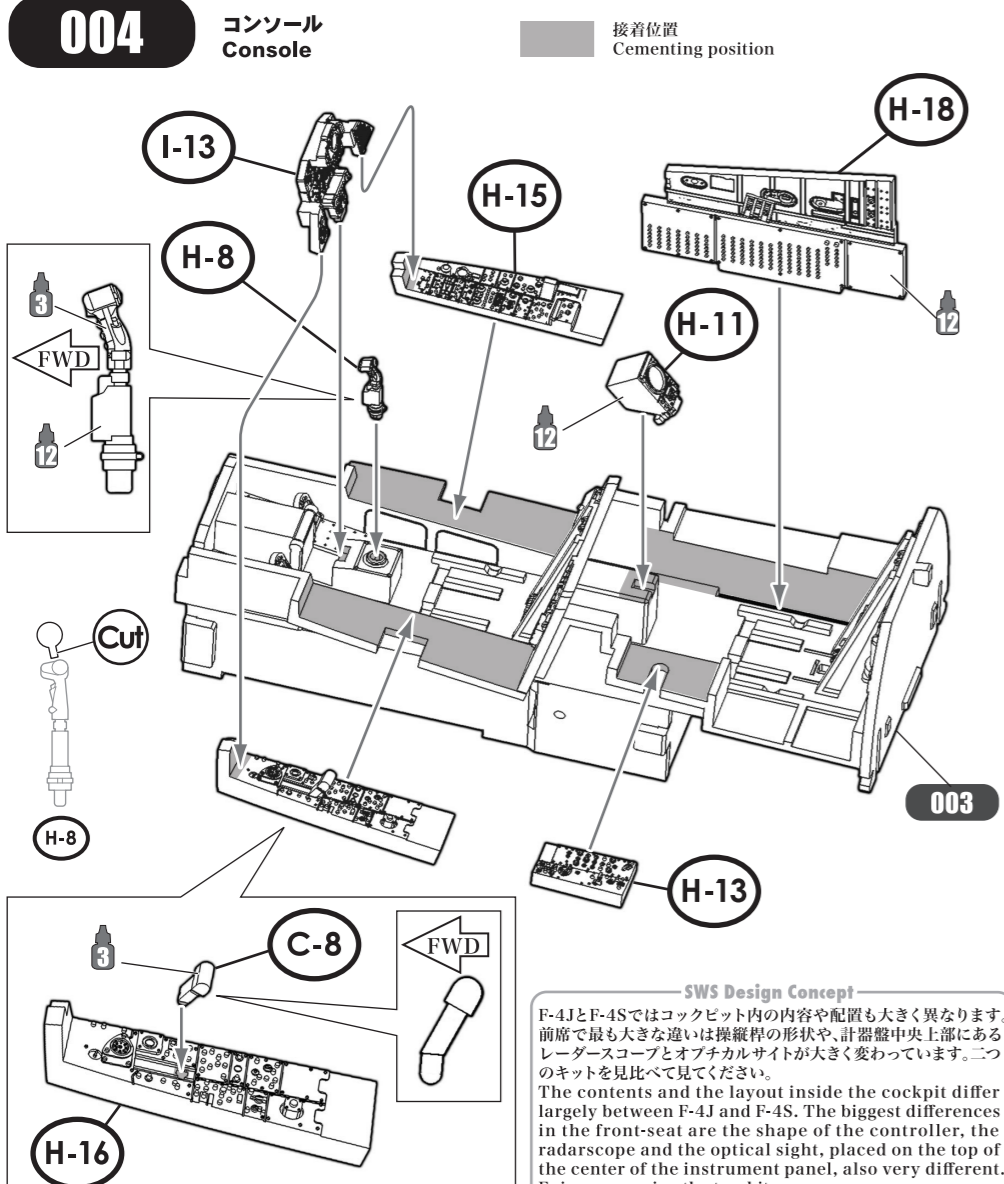

実機におけるパーツ名
 Name of the parts of the real aircraft.

- H-8 操縦桿 / Control Stick
- H-13 計器盤 / Instrument Panel
- C-8 スロットルレバー / Throttles Lever
- H-18 後席右壁 / Rear Cockpit Right Wall
- H-13 H-15 H-16 コンソール / Console
- H-11 レーダースコープ / Radar Scope


各パーツ接着位置
 Parts configuration after assembly.

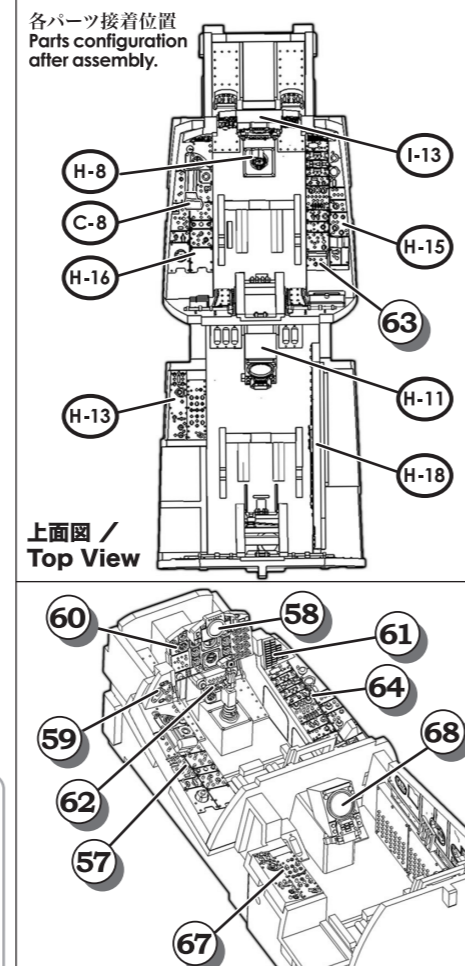

SWS Design Concept
 F-4JとF-4Sではコックピット内の内容や配置も大きく異なります。前席で最も大きな違いは操縦桿の形状や、計器盤中央上部にあるレーダースコープとオプティカルサイトが大きく変わっています。二つのキットを見比べてみてください。
 The contents and the layout inside the cockpit differ largely between F-4J and F-4S. The biggest differences in the front-seat are the shape of the controller, the radarscope and the optical sight, placed on the top of the center of the instrument panel, also very different. Enjoy comparing the two kits.

005


後席計器盤 Rear Seat Instrument Panel

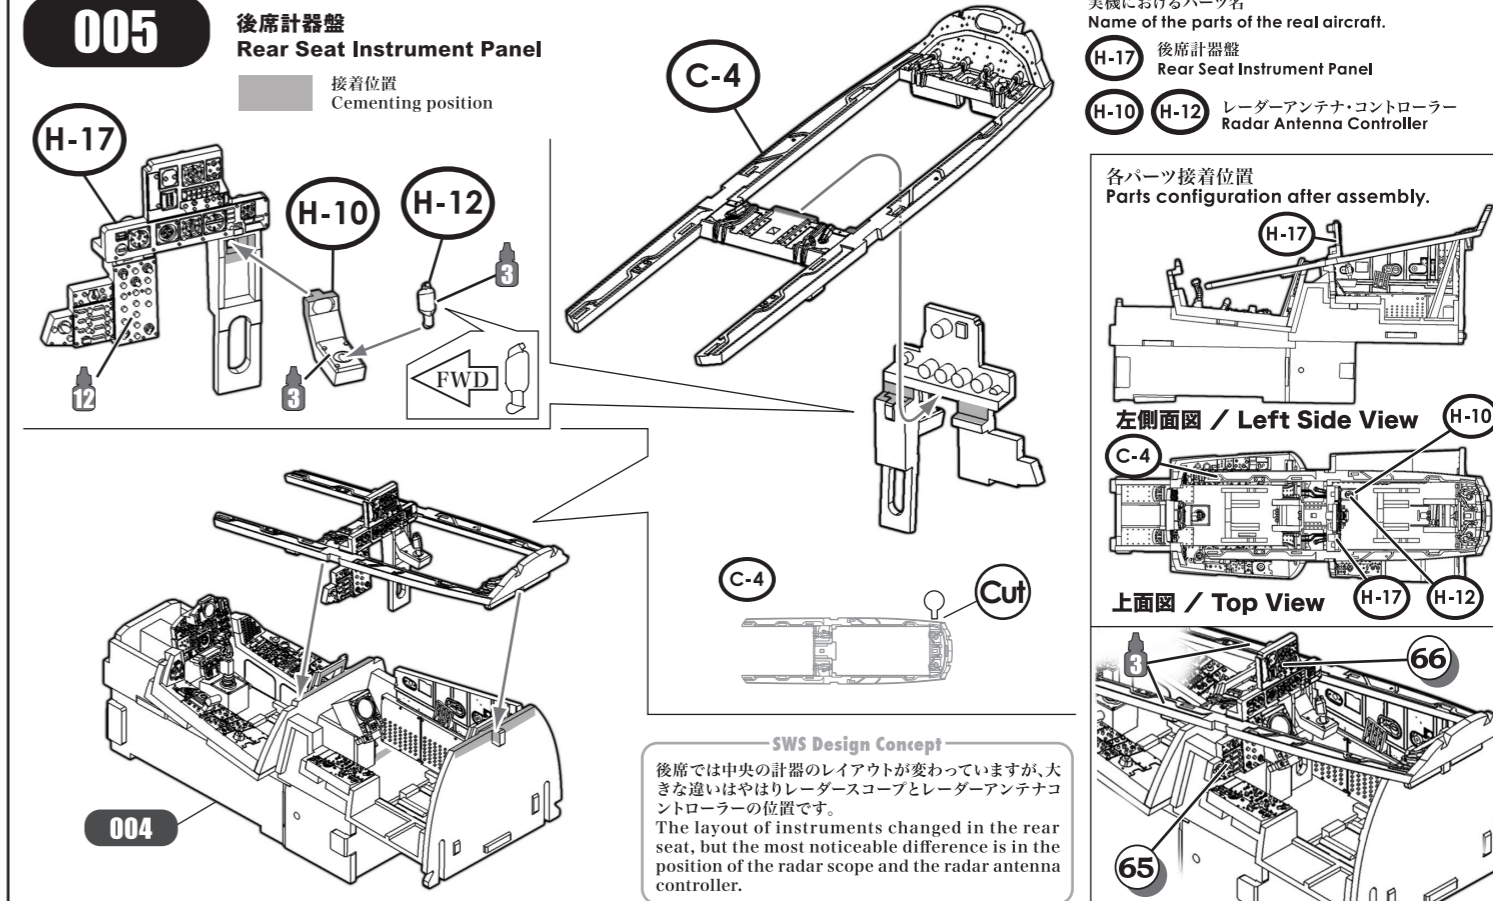

実機におけるパーツ名
 Name of the parts of the real aircraft.


- H-17 後席計器盤 / Rear Seat Instrument Panel
- H-10 H-12 レーダーアンテナ・コントローラー / Radar Antenna Controller

各パーツ接着位置
 Parts configuration after assembly.

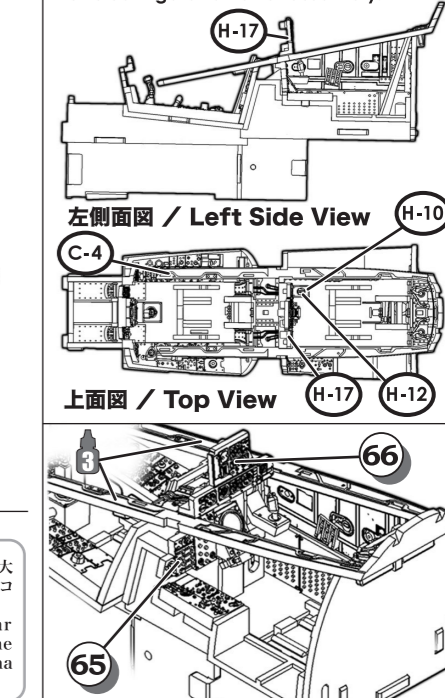


004

胴体外板(右側) Fuselage Outer Panel (Right)

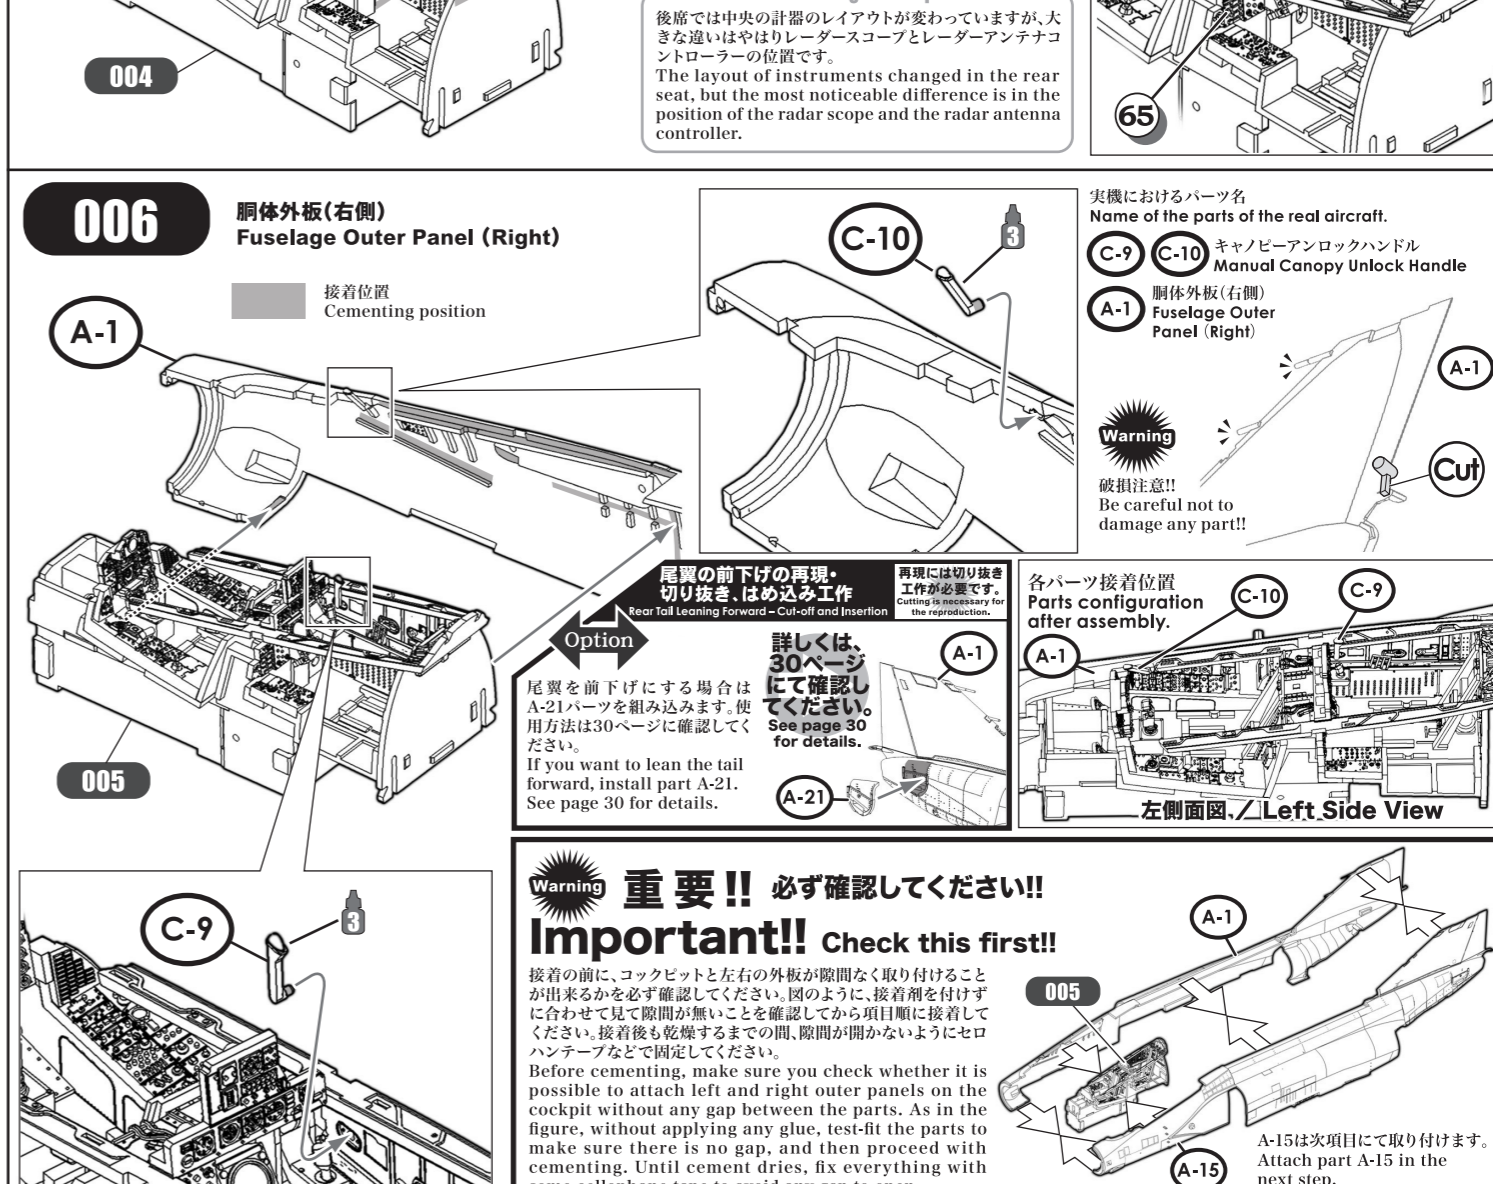

実機におけるパーツ名
 Name of the parts of the real aircraft.

- C-9 C-10 キャノピーアンロックハンドル / Manual Canopy Unlock Handle
- A-1 胴体外板(右側) / Fuselage Outer Panel (Right)

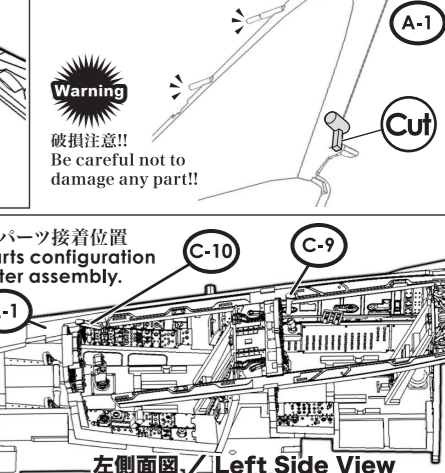

Warning 重要!! 必ず確認してください!!
Important!! Check this first!!
 接着の前に、コックピットと左右の外板が隙間なく取り付けられることが出来るかを必ず確認してください。図のように、接着剤を付けずに合わせて見て隙間が無いことを確認してから項目順に接着してください。接着後も乾燥するまでの間、隙間が開かないようにセロハンテープなどで固定してください。
 Before cementing, make sure you check whether it is possible to attach left and right outer panels on the cockpit without any gap between the parts. As in the figure, without applying any glue, test-fit the parts to make sure there is no gap, and then proceed with cementing. Until cement dries, fix everything with some cellophane tape to avoid any gap to open.
 A-15は次項目にて取り付けます。Attach part A-15 in the next step.