

### Attention!

This item is meant for hobbyists 15 years of age or older. Please do not give this item to children under 15. This item is intended for use with the Zoukei-mura 1/32 "A-1H" Skyraider.

The polyethylene bags that contain the parts and assembly manual present a suffocation risk. Please do not drop the parts or bend them in unintended ways, as they may be damaged. In order to properly express the shape of the sculpt, it was unavoidable for some parts to have sharp edges. Please be careful.

**SUPER WING SERIES**  
1/32 "A-1H" SKYRAIDER  
These are extra parts to be used with the "A-1H" Skyraider kit.

**造形村**  
ZOUKEI-MURA INC.

http://www.zoukeimura.co.jp/  
P.O. Box Design Zoukei-mura, Inc.  
Distributor - VOLKS, Inc.  
http://www.volks.co.jp/english/index.asp  
60 Goshonouchi Nakamachi Shirojo,  
Shimogyo-ku, Kyoto Japan 600-8862

## SUPER WING OPTIONS



ZOUKEI-MURA INC. PRESENTS  
SUPER WING SERIES, No.03  
1/32 DOUGLAS [SWS03-M02]

**A-1H SKYRAIDER**  
U.S. NAVY

## Metal Struts

**SUPER WING SERIES**  
1/32 DOUGLAS  
"A-1H" SKYRAIDER

These are extra parts to be used with the "A-1H" Skyraider kit.

These parts are made of white metal. Please be careful during assembly. Plastic model cement won't work on these parts. Please use a suitable instant glue.

**造形村**  
ZOUKEI-MURA INC.

©ZOUKEI-MURA INC. All Rights reserved.  
¥2,200 (Including Tax) ¥2,310

**SUPER WING OPTIONS**  
1/32 DOUGLAS [SWS03-M02]  
**A-1H SKYRAIDER**  
U.S. NAVY  
1/32 "A-1H" SKYRAIDER  
These are extra parts to be used with the "A-1H" Skyraider kit.

**Metal Struts**  
4 15189921504223  
¥2,200 (Including Tax) ¥2,310

How to Install the Metal Struts onto the 1/32 US Navy "A-1H" Skyraider. These parts are installed while assembling the 1/32 "A-1H". Please check the assembly manual of the 1/32 "A-1H" as well.

### How to Install the Rear Wheel Strut

Install the metal wheel strut and moving part instead of D-35.


Metal Strut for Rear Wheel

Metal Moving Part for Rear Wheel Strut

Metal Yoke (Right Side)


Please substitute the metal rear wheel strut parts for D-35, D-36 and D-12 as shown in the illustration below while assembling the 1/32 "A-1H".

Refer to the A-1H's manual p10.

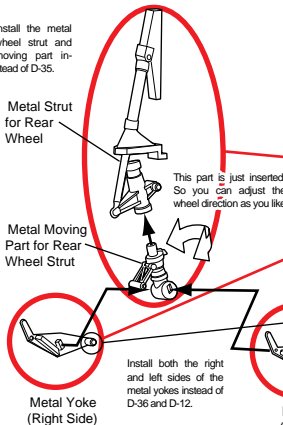

This part is just inserted. So you can adjust the wheel direction as you like.

Bind C-3 in between these parts when you assemble them.

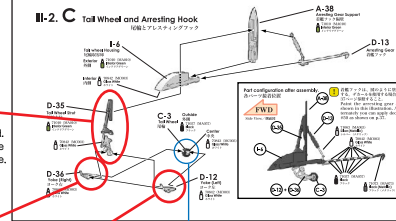


Regarding Inserting the Moving Part into the Metal Wheel Strut.

If it is hard to insert because of a tight fit, file down the shaft of the moving part or widen the hole of the struts with a pin vise and drill (approx. 2.5mm diameter). In case the fit is too loose, please apply instant glue around the shaft of the moving part then file it down to the ideal thickness after the glue is completely dried. Please be careful of the rear wheel direction if you prefer to glue it.


### How to Install the Main Wheel Struts

Please substitute the metal main wheel struts for D-37 and D-38 as shown in the illustration below while assembling the 1/32 "A-1H".

Refer to the A-1H's manual p24.

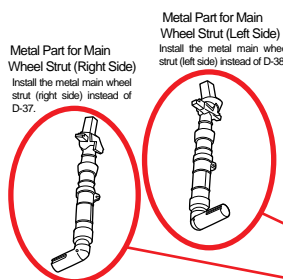

The shapes of the metal struts are different from D-39 and D-40.

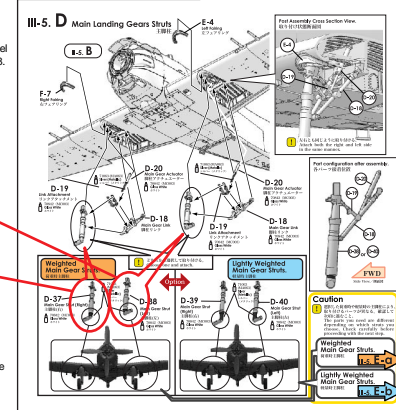

Using the A-1H Weighted Tire Set together with this item will add an even more realistic look to your work (sold separately).

### Important Points for Assembly

Please carefully read the assembly manual prior to opening and make sure that everything is included.

To use this item, please refer to the assembly manual of the 1/32 "A-1H" Skyraider as well.

To use this item, tools such as nippers, craft knife, files, sanding papers, instant glue, metal primer spray, etc. are required, so please prepare them.

These parts are made of white metal and will need to be prepared before use. You can remove gate marks with a large nipper and remove any excess with a craft knife. Then, finish with sanding papers. It may damage the blades if you use a fine nipper, so please be careful. For the seam lines, scrape them off with a knife and then finish with sanding papers. Please be careful not to damage the parts while you are working on them.


Instant glue should be used for these parts. Please note that they cannot be glued with a plastic model kit cement.

Spray metal primer to finish the base before painting.

With regard to paint, after taking personal safety and the global environment into consideration, we recommend using "Vallejo Colors," acrylic hobby paints for the new century. Please check references regarding the US Navy at that point and the assembly manual of 1/32 "A-1H" Skyraider, and finish your Skyraider in your preferred color scheme.

When it comes time to use tools and paints, please carefully follow the individual instructions respective to each tool for your safety.

### Chart of Included Parts

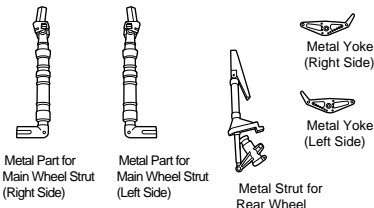

We take the utmost of care when overseeing manufacturing, but if your kit is among the very small percentage that contains a defective part, please contact customer service within two weeks of your purchase with your full name and order number.

Purchasers from VOLKS Japan International Web Site:

Please contact imos@volks.co.jp.

Purchasers from VOLKS USA:

Please contact service@volksusa.com.