

This item is intended for use with the Zoukei-mura 1/32 "A-1H Skyraider The polyethylene bags that


contain the parts and assem bly manual present a suffo cation risk. Please do not drop the parts or bend them in unintended ways, as they may be damaged.

in order to properly express the shape of the sculpts, i was unavoidable for some parts to have sharp edges Please be careful.





http://www.zoukeimura.co.ip/ Plan & Design : Zoukei-Mura, Inc. Distributor : VOLKS, Inc. http://www.volks.co.jp/en/index.aspx 60 Goshonouchi Nakamachi Shichi-jo Shimogyo-ku, Kyoto Japan 600-8862

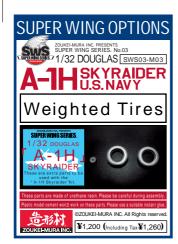



200

## Important Points for Assembly

Please carefully read the assembly manual prior to opening and make sure that everything is included.

To use this item, tools such as nippers, craft knife, files, sanding papers, instant glue, etc. are required, so please prepare them.

Please prepare the parts first. You can remove seam lines and gate marks with tools such as nippers, a craft knife and files. Urethane resin is softer than the plastic material used for the kit. So be careful to avoid carving too much. Air bubbles can be filled with putty (epoxy, plastic, etc.) or similar, then finish with sanding paper. In the case that mold details are lost, you can recover them with tools such as spatulas

For assembly, adjust the direction of each part while checking the balance and pose of your entire kit.

Instant glue should be used for these parts. Please note that they cannot be glued with plastic model kit cement.

Base preparation is required before painting. Please thoroughly fin ish the base with a coat of surfacer spray (otherwise, the paint will chip off as time passes.)

With regard to paint, after taking personal safety and the global en vironment into consideration, we recommend using "Vallejo Colors." acrylic hobby paints for the new century. Please check references regarding the US Navy at that point and the assembly manual of the 1/32 XA-1HE Skyraider, and finish your Skyraider in your preferred color scheme.

When it comes time to use tools and paints, please carefully follow the individual instructions respective to each tool for your safety.




We take the utmost of care when overseeing manufacturing, but if your kit is among the very small percentage that contains a defective part, please contact customer service within two weeks of your purchase with your full name and order number.

Purchasers from VOLKS Japan International Web Site:

Please contact imos@volks.co.ip. Purchasers from VOLKS USA:

Please contact service@volksusa.com.


How to Install the Weighted Tires onto the 1/32 US Navy "A-1H" Skyraider These parts are installed white assembling the 1/32 "A-1H". Please check the assembly manual of the 1/32 "A-1H" as well

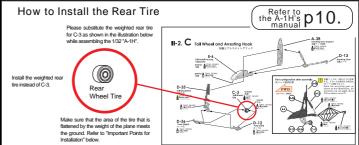

How to Install the Main Tires

Please substitute the weighted main tire parts for C-10 as shown in the illustration below.

Refer to the A-1H's p24. manual 1




Regarding the main tires, it doesn't matter which part goes on the right or left. However, the areas where the tires are flattened by the weight of the plane need to be at the hottom (touching the ground). Right or left will be determined by how vou attach D-14


Main Wheel Tire

Be careful about the direction of D-14. The flattened areas of the weighted tires need to meet with the ground when you attach this part. It may be better not to glue it at this point. You can attach only D-14 to the strut (refer to the A-1H manual p.25) and then adjust the tires1 flattened areas during assembly.



Please check the 1/32 A-1H's manual p.24 and 25 regarding attaching them to the aircraft.



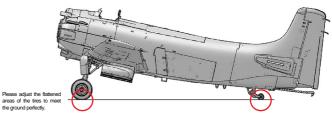

Using the "Metal Struts" together with this item will add an even more realistic look to your work (sold separately.)