

apply the glue until it dries


completely.


接着する前に上下の外板が取り 付け出来ることを必ず確認して ださい。接着後も乾燥するまでの 間、隙間が開かないようにセロノ ンテープなどで固定してください Before gluing, be sure to check that you can assemble the top and underside panels. Secure in place using cellophane tape etc. in order to prevent a gap from forming during the time between when you apply the glue until it dries completely.


1/72 scale Assembly

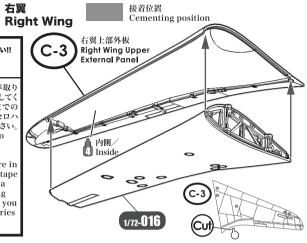

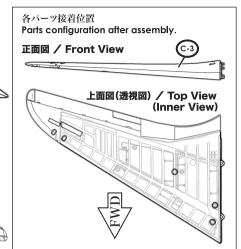

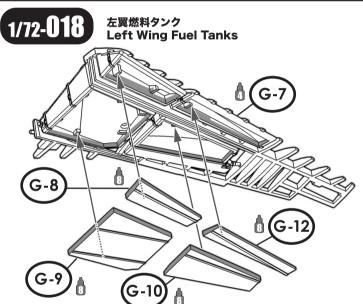

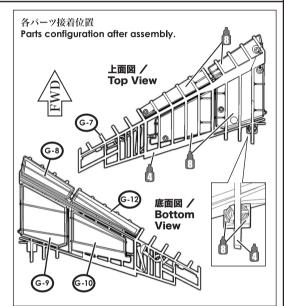

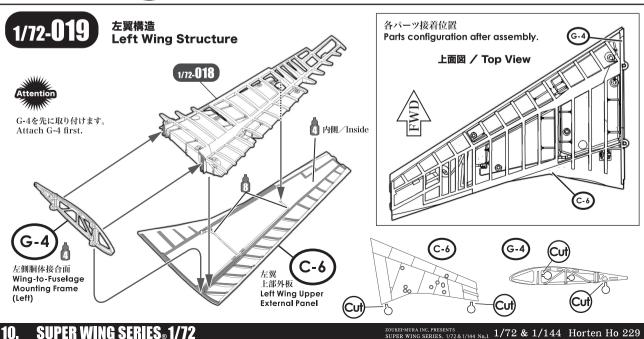

1/72-019

