


**1st SOS (1st Special Operations Squadron), A-1H**


Please use this marking set while referring to both the assembly manual and the Navy type decals included with the Zoukei-mura 1/32 "U.S. Air Force A-1J Skyraider" kit.

**TC511 1st SOS "Stump Jumper"**  
 Sr.no. 137511

**Left Side of the Fuselage**

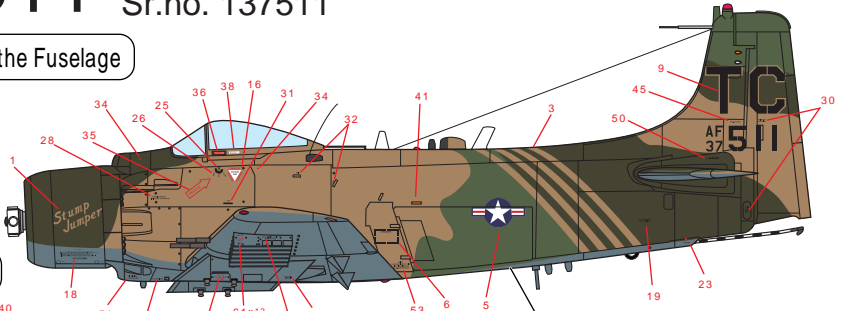

**Propeller**

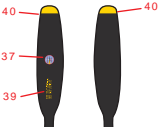


Front Side Back Side

**Main Gear Tires**



70957 (MC031) Flat Red

**Right Side of the Fuselage**

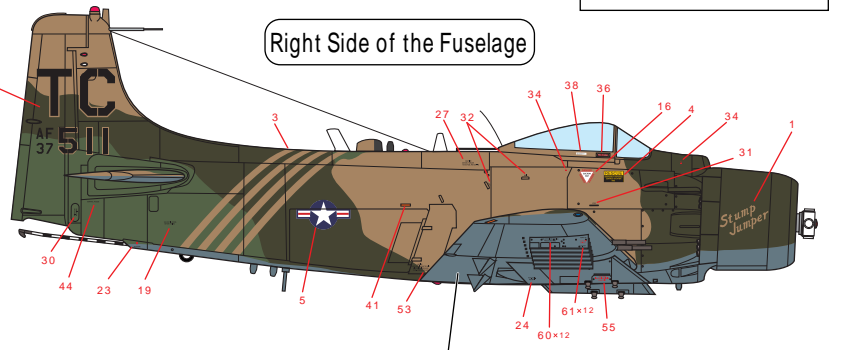

- 機体上面: タン Fs.no.30219
- 機体上面: グリーン Fs.no.34079
- 機体上面: グリーン Fs.no.34102
- Aircraft Underside: Gunship Gray Fs.no.26118


70957 (MA053) Dark Sea Green

- 26 Places where this decal should be applied.
- 24 Places where the default Navy decals included with the "U.S. Air Force A-1J Skyraider" should be applied.

For basic paint job instructions, please refer to the "U.S. Air Force A-1J Skyraider" assembly manual.

**TC511 1st SOS "Stump Jumper"**  
 Sr.no. 137511


**Upper Side of the Aircraft**

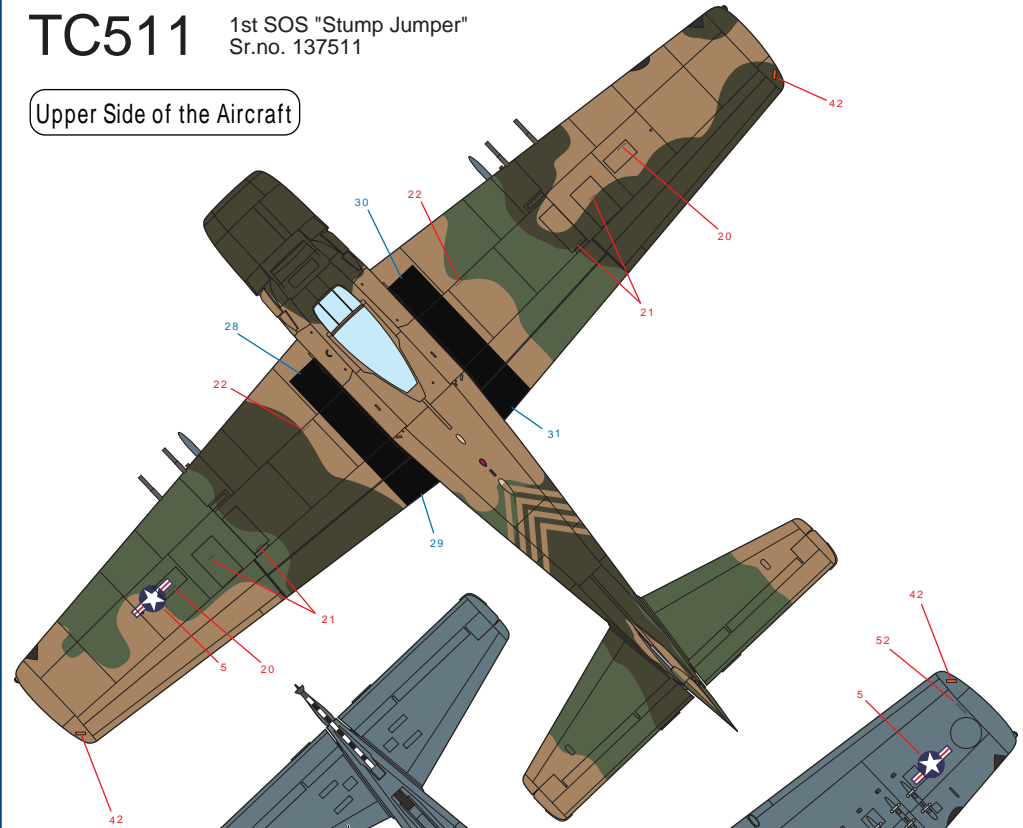

70957 (MA053) Dark Sea Green

**Bottom Side of the Aircraft**

- 26 Places where this decal should be applied.
- 24 Places where the default Navy decals included with the "U.S. Air Force A-1J Skyraider" should be applied.

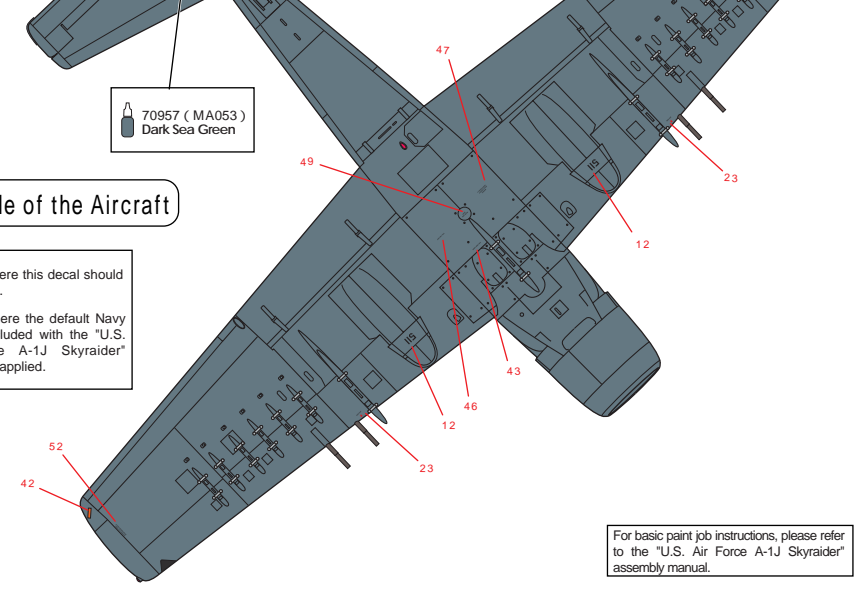

For basic paint job instructions, please refer to the "U.S. Air Force A-1J Skyraider" assembly manual.