


- For ages 15 and up. ■Read all instructions before use. Only use as instructed.
- ●Contains small and sharp parts. Do not swallow and be careful of injury.
- Keep out of reach of small children.
- Plastic bags may cause suffocation. Do not use them to cover your head or face.
- This product is delicate. To avoid breakage, do not forcibly bend, drop, or apply too much pressure.
- The outer packaging may be damaged during transportation.
- Keep the instructions. Please contact our Customer Service Center if you have any questions or concerns.
- OThis assembly kit is
- Assembly requires







Pay attention to the "Important Points for Assembly" when you assemble the resin parts of this set. Please see the Color Reference for painting.



■Rear Seat Radar Operator ■Front Seat Pilot



Color Reference Valleio 🗸

Vallejo Color Guide MA= Model Air ()= Vallejo Catalog Number

Suit Blue:

Blue Grey Suit Yellow:

Boots, gloves, etc. 71042(MA) Dark Brown

Helmet and Suit Silver:

71065(MA)

Helmet and Suit

Black Lines: 71053(MA)

Dark Sea Grey

Helmet Shades: 71300(MA) Glossy Sea Blue

◆◆Important Points for Assembly◆◆

■Before opening, read this manual carefully and check all parts This set is designed exclusively for the Zoukei-Mura 1/32 Ho 229 B. Refer to both this manual and the SWS 1/32 "Ho 229 B" kit's instruction manual when using this set.
■To use this item, tools such as ●nippers, ●craft knife, ●files,

sanding papers, sinstant glue, etc., are required, so please prepare them.

Please prepare the parts first. You can remove seam lines and gate marks with tools such as nippers, a craft knife and files. Urethane resin is softer than the plastic material used for the kit, so be careful to avoid carving too much. Air bubbles can be filled with putty (epoxy, plastic, etc.) or similar, then finished with sanding paper. In the case that mold details are lost, you can recover them with tools such as spatulas.

During assembly, adjust the orientation of each part while checking the balance and pose of the entire kit.

■Instant glue should be used for these parts. Please note that they cannot be glued with plastic model kit cement.


■We recommend using brass wire (sold separately) to reinforce the areas where the parts are glued together. Use a pin vise and drill bit to open a hole on both sides of each gluing surface, then insert the ends of a brass wire into the holes to connect the sides. This will greatly increase the strength of each joint. (Using the wires without glue to temporarily build a figure is called dry fitting. We recommend doing so in order to check each figure's balance.)

■Base preparation is required before painting. Please thorough ly finish the base with a coat of surfacer spray (otherwise, the paint will chip off as time passes).

For painting, we recommend using the water-based paint 'Valleio'. Using this manual or your own reference, finish with your preferred colors.

■For the single-seater (V3) type, use the separately sold "SWS08-F01 Seated Pilot in Normal Pose".

When it comes time to use tools and paints, please carefully follow the individual instructions respective to each tool for your safety.



We take the utmost of care when overseeing manufacturing, but if your kit is among the very small percentage that contains a defective part, please contact customer service within two weeks of your purchase with your full name and order number.


Purchasers from VOLKS Japan International Web Site: Please contact imos@volks.co.ip. Purchasers from VOLKS USA: Please contact service@volksusa.com.

○How to Insert the Pilot in the Aircraft

Front seat pilot: Feet on rudder pedals, right hand on control stick. left hand on lever

■Rear seat radar operator: Feet on rudder pedals. right hand on right-side equipment, left hand on front panel.

Sit the pilot in place before attaching the canopy.

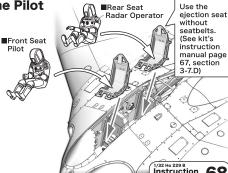

Instruction P68

3-7. **E**